27 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 654834

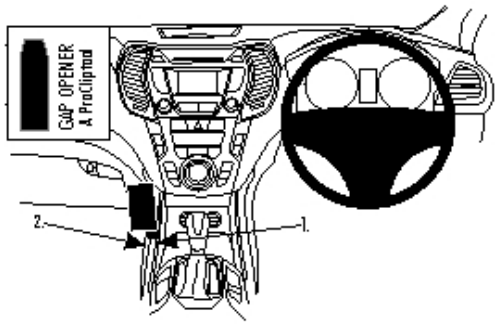

654834 ProClip

Angled mount

The ProClip is a mounting bracket for the vehicle’s dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320286548342

Item no 654834 fits:
Hyundai Santa Fe 13-15 (For all countries)

INSTALLATION INSTRUCTIONS

1.

2.

3.

4.

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the seam/gap in the front side of the center console pillar, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip.

2. Place the angled edge on the right side of the ProClip around the console pillar back edge.

3. Press firmly forward on the left front side of the ProClip so the angled edge on the left/front side flexes forward and hooks into the seam/gap above the gap opener. Press the angled edge all the way into the gap. Pull out the gap opener.

4. The ProClip is in place.